HUAWEI NOVA Y90 User Guide



Contents

Essentials Basic Gestures 1 Lock and Unlock Your Screen 4 5 Get Familiar with the Home Screen 6 Notification and Status Icons Control Panel 11 Screenshots & Screen Recording 16 **Enter Text** Multi-Window 17 **Smart Features** Al Voice 21 24 Al Lens 24 Al Touch 25 Tap to Project to a Smart Screen 25 Huawei Print Multi-Device Collaboration 25 26 Audio Control Panel **Camera and Gallery** 28 Take Photos 30 Shoot in Portrait, Night, and Wide Aperture Modes 31 Al Camera 31 High-Res Mode 32 Pro Mode 34 **Record Videos** 35 Time-Lapse Photography **Dual-View Mode** 35 35 **Adjust Camera Settings** 37 Manage Gallery Highlights 41 **Apps** 44 MeeTime 46 Notepad 50 Compass **Settings** 51 Display & Brightness

Biometrics & Password

Security

About Phone

i

51 54

54


Essentials

Basic Gestures

Basic Gestures and Shortcuts

System Navigation Gestures

Go to **Settings** > **System & updates** > **System navigation** and make sure that **Gestures** is selected.

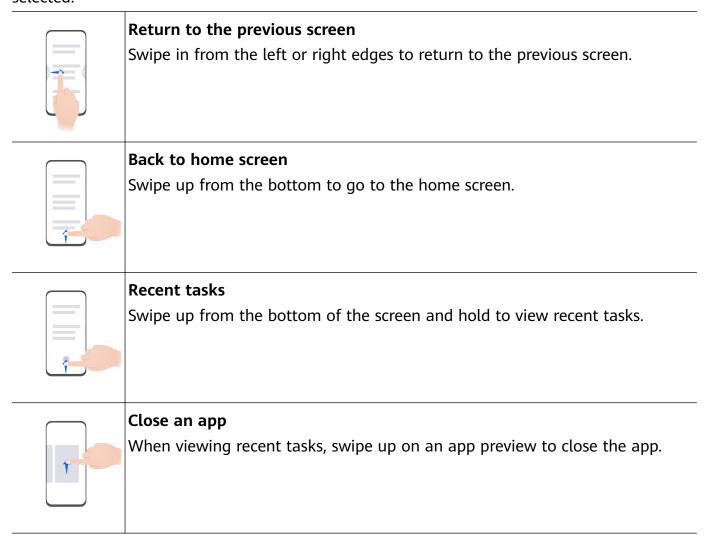



Switch between apps

- Slide across the bottom edge of the screen to switch between apps.
 Before using this gesture, touch Settings on the System navigation screen, and ensure that Slide across bottom to switch apps is enabled.
- · Swipe across the bottom of the screen in an arc to switch between apps.



if your device does not have the **Slide across bottom to switch apps** switch, it indicates that the corresponding feature is not supported.

Knuckle Gestures

Before using knuckle gestures, use either of the following methods to make sure that all necessary features are enabled (depending on your device model):

- Go to Settings > Accessibility features > Shortcuts & gestures, and enable Take screenshot and Record screen.
- Go to Settings > Accessibility features > Motion control > Take screenshot, and enable
 Smart screenshot.



Take a screenshot

Knock twice on the screen with a knuckle to take a screenshot.



Take a scrollshot

Knock on the screen with a knuckle and draw an "S" to take a scrolling screenshot.



Capture part of the screen

Knock and draw an enclosed area with a knuckle to capture part of the screen.



Record screen

Knock twice on the screen with two knuckles to start or end a screen recording.

More Gestures



Access Home screen editing mode

Pinch two fingers together on the home screen.



Display the shortcut panel on the lock screen

Turn on the screen and swipe up from the bottom of the lock screen.



Display the search bar

Swipe down from the middle of the home screen.



Display the notification panel

Swipe down from the upper left edge of the screen.



Turn on a shortcut switch

Swipe down from the upper right edge of the screen to display Control

Panel and touch to expand the shortcut switches panel (depending on your device model).

Button Shortcuts



Power off and restart

Press and hold the Power button until your phone displays the **Power off** and **Restart** menu.



Turn up volume

Press the Volume up button.



Turn down volume

Press the Volume down button.



Take a screenshot

Press the Volume down and Power buttons simultaneously.

Some products do not have volume buttons.

Lock and Unlock Your Screen

Lock and Unlock Your Screen

Lock Your Screen

Auto-lock:

Your phone will automatically turn off when you haven't used it for a certain period of time.

You can go to **Settings** > **Display & brightness** > **Sleep**, and set the screen timeout duration.

Manually lock the screen:

To lock the screen, use either of the following methods:

- · Press the Power button.
- On the home screen, pinch two fingers together to enter editing mode. Touch Widgets, and drag the Screen Lock icon to the home screen. Then touch the Screen Lock icon to lock the screen.

Turn On the Screen

You can turn on the screen in any of the following ways (depending on your device model):

- · Press the Power button.
- Go to Settings > Accessibility features > Shortcuts & gestures > Wake screen, and enable and use Raise to wake, Double-tap to wake, or Show palm to wake.
- Go to Settings > Accessibility features > Motion control > Raise, and enable and use
 Wake device.
- 1 If your phone does not have this option, it indicates that this feature is not supported.

Unlock Your Screen

Password unlock: Once the screen is turned on, swipe up from the middle of the screen to display a panel where you can enter your lock screen password.

Face unlock: Once the screen is turned on, bring your face in front of the screen. Your phone will unlock automatically after recognizing your face.

Fingerprint unlock: Touch the fingerprint sensor zone with a finger that you have enrolled. Be sure to first wake the screen, if your device has an in-screen fingerprint sensor.

Get Familiar with the Home Screen

Create and Use Large Folders

You can group similar apps in a large folder and name the folder for better management. You can also turn a standard folder into a large one (both the folder and the app icons in it will be enlarged) to access apps more easily.

Create a Large Folder

- **1** Touch and hold an app icon and drag it over another icon to create a new folder.
- **2** Touch and hold a folder to switch between display modes. For example, you can touch and hold a new folder and select **Enlarge** from the displayed menu to create a large folder.
- **3** You can touch the lower right corner of the large folder to open it and then touch the folder name to rename it. You can also rename the folder by touching and holding it and selecting **Rename**.

Operations in a Large Folder

You can perform the following operations in large folders:

- Open apps: In a large folder, touch an icon to access the app directly.
- Enter and exit folders: Touch the lower right corner of a large folder to enter it. Touch a blank area in the folder to exit it.

When there are more than nine apps within a large folder, a stacked icon will appear in the lower right corner of the folder. You can touch the stacked icon to view more apps within the folder.

- Add or remove apps: Open a large folder, touch —, and add or remove apps as required.

 If you deselect all apps within the folder, the folder will be deleted.
- Switch between display modes: Touch and hold a folder to switch between a standard and large display. For example, you can touch and hold a standard folder and select **Enlarge** from the displayed menu to create a large folder.

Notification and Status Icons

Notification and Status Icons

Network status icons may vary depending on your region or network service provider. Supported features vary depending on the device model. Some of the following icons may not be relevant to your phone.

•	• •		
⁵⁶ .ıll	5G network connected	⁴⁶ 11	4G network connected
³⁶ .ıIl	3G network connected	²⁶ .11	2G network connected
.ıIl	Full signal strength	Rall	Roaming
	Data saver enabled	!	No SIM card inserted
(in)	Hotspot enabled	(A)	Hotspot connected
(C) _x	Hotspot disconnected	D	Switching networks via Wi-Fi+
6	Wi-Fi connected	<u>্</u>	Wi-Fi network is faulty, unable to connect to the Internet
6 **	Wi-Fi 6 connected	((:	Wi-Fi 6 network is faulty, unable to connect to the Internet
6 ⁺	Wi-Fi 6+ connected	6.	Wi-Fi 6+ network is faulty, unable to connect to the Internet
+	Airplane mode enabled	0	Alarm set
	Battery empty		Low battery
*	Charging	**	Fast charging
**	Super charging	32	Wireless super charging


			ESSCITIO
L	Wireless fast charging	3	Regular wireless charging
	Power Saving mode enabled	X	Digital Balance enabled
*	Bluetooth enabled	℀Ū	Bluetooth device battery
**	Bluetooth device connected	0-	VPN connected
	Driving mode enabled	a	Projection device connected
•	Location service enabled	③	Eye Comfort enabled
	Headset connected	(%)	Performance mode enabled
•	Calling	HD	VoLTE enabled
F ⁄	Missed call	Q	New message
Ď	Silent mode	} [Vibration pattern
	NFC enabled	•	Do Not Disturb mode enabled
0	Syncing data	(i)	Data syncing failed
<u> </u>	New email		Event reminder
• • •	More notifications		

Control Panel

Introduction to Control Panel

You can easily manage and control media playback, shortcuts, and **Device+** in the **Control Panel**.

Swipe down from the upper right edge of the screen to display **Control Panel** where you can access the following features with ease:

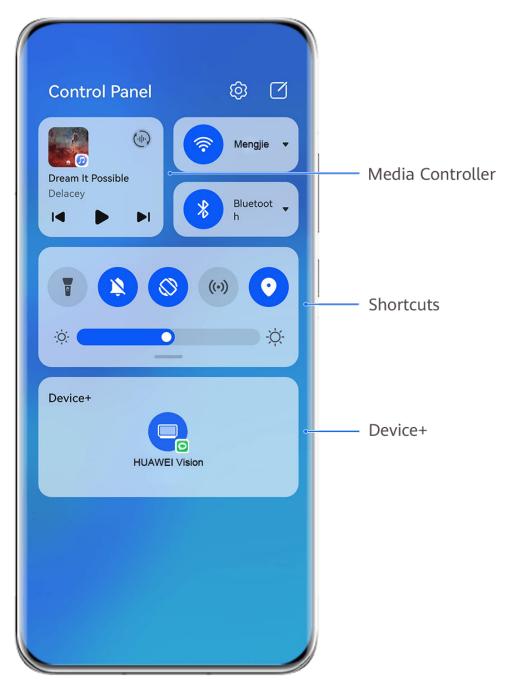


- 1 The figures are for reference only.
- **Media controls:** To control media playback and switch between recently used media apps and media devices (such as Visions and Bluetooth headsets).
- Shortcut controls: To enable, disable, or set frequently used features.
- **Device+**: Automatically discovers nearby devices logged in to the same **HUAWEI ID** and allows you to link them so they work together as one.
- Device controls: To manage and control devices and scenes that have been added in AI
 Life. This feature is only available in some countries and regions.

Use Shortcut Switches

Turn on a Shortcut Switch

Swipe down from the upper right edge of the screen to display **Control Panel** and touch to expand the shortcut switches panel (depending on your device model).

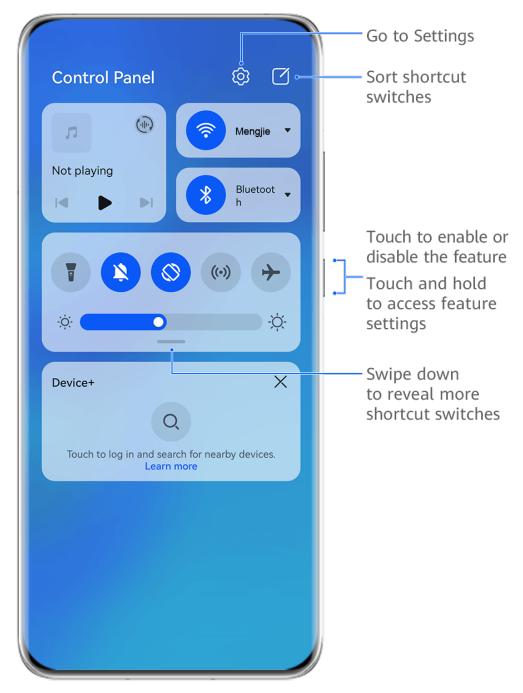

- 1 The figures are for reference only.
- Touch a shortcut switch to enable or disable the corresponding feature.
- Touch and hold a shortcut switch to access the settings screen of the corresponding feature (supported by some features).
- Touch to access the system settings screen.

Customize Shortcuts

Swipe down from the upper right edge of the screen to display **Control Panel**, go to **Edit switches**, then touch and hold a shortcut switch to drag it to your preferred position, and touch **Done**.

Audio Control Panel

Manage Audio Playback in Audio Control Panel

When multiple audio apps (such as **Music**) are opened, you can manage music playback and switch between these apps in Audio Control Panel with ease.

- **1** After opening multiple audio apps, swipe down from the upper right edge of the phone to display **Control Panel**, then touch the audio playback card at the top of **Control Panel**.
- **2** The currently and recently used audio apps will be displayed in Audio Control Panel where you can manage playback (such as playing, pausing, and switching to the previous or next song) in the app in use, or touch another audio app to quickly switch playback.
- Some apps need to be updated to the latest version before using this feature.
 - · Not all apps support Audio Control Panel.

Quickly Switch Audio Playback Device

When your phone is connected to an audio device (such as a headset, Bluetooth speaker, or Vision product), you can quickly switch the playback device in the audio control section in **Control Panel** (such as for transferring the current music playback from your phone to a Bluetooth speaker).

- 1 Connect your phone to an audio device via Bluetooth or other methods.

 After a Vision product is connected to your phone via Bluetooth, you can also connect it to the same Wi-Fi network and log in to the same **HUAWEI ID** as your phone to perform more operations.
- 2 Swipe down from the upper right edge of your phone to display **Control Panel**, touch or the device icon (such as) in the top right corner of the audio control section at the top, then select the audio device from the connected device list to transfer the current audio playback on your phone to the device.

Work Seamlessly Across Devices with Device+

Device+ allows for collaboration between different devices, making your phone the hub of your nearby Vision and other supported devices for them to be controlled conveniently. You can also seamlessly transfer ongoing tasks on your phone, from MeeTime calls to audio and video content being streamed, to your Vision with just a tap.

Please make sure your device has been updated to the latest system version.

Set Device+

Currently, **Device+** supports linking phones with the following types of devices. To use this feature, make sure that devices to be connected support **Device+**. Before you get started, enable Bluetooth and Wi-Fi and log in to your HUAWEI ID on your phone. For other devices, perform the following settings:

- **Vision**: Ensure that it is connected to the same LAN and logged in to the same HUAWEI ID as your phone.
- **Bluetooth device**: Some Bluetooth devices (such as Bluetooth headsets) can be linked with your phone via **Device**+ after establishing a Bluetooth connection.
- Device+ does not support collaboration between phones.
 - If **Device+** is hidden, access **Control Panel** and go to \bigcirc > **Show Device+**.

Transfer MeeTime Calls and Audio or Video Being Streamed to Other Devices

When you are making MeeTime calls on your phone, watching videos (such as in HUAWEI Video, Youku, or other video streaming apps), or listening to music, you can transfer any of these ongoing tasks to another device via **Device+** and pick up from where you left off on the new device. For instance, you can transfer a MeeTime call to your Vision.

10 MeeTime: This feature is only available in some countries and regions.

You can select different devices to transfer the following tasks:

- · Videos: Can be transferred to Visions.
- MeeTime calls: Can be transferred to Visions.
- **Music**: Can be transferred to Bluetooth earphones and Visions (either when the screen is on or off).
- 1 Swipe down from the upper right edge of your phone to display **Control Panel**. Available devices will be displayed in the **Device+** section. You can also touch to search for nearby devices manually.
- **2** Touch a device that you want to transfer the ongoing tasks to.

Screenshots & Screen Recording

Take a Screenshot

Take a Full Screenshot with a Knuckle Tap

- **1** Before using knuckle gestures, use either of the following methods to enable this feature (depending on your device model):
 - Go to Settings > Accessibility features > Shortcuts & gestures > Take screenshot and enable Knuckle screenshots.

- Go to Settings > Accessibility features > Motion control > Take screenshot and enable Smart screenshot.
- **2** Tap twice in quick succession with one knuckle to take a screenshot of the entire screen.

Take a Screenshot with a Key Shortcut

Press and hold down on the Power and Volume down buttons at the same time to take a screenshot.

Take a Screenshot with a Shortcut Switch

Swipe down from the upper right edge of the screen to display **Control Panel**, touch expand the shortcut switches panel (depending on your device model), and touch **Screenshot** to take a screenshot.

Share or Edit a Screenshot

After you take a screenshot, a thumbnail will appear in the lower left corner of the screen. Feel free to:

- Swipe up on the thumbnail to select a method for sharing the screenshot with others.
- Tap on the thumbnail to edit, delete, or do more with the screenshot.

Screenshots are saved to **Gallery** by default.

Swipe Down with Three Fingers to Take a Screenshot

- 1 Go to Settings > Accessibility features > Shortcuts & gestures > Take screenshot or Settings > Accessibility features > Motion control > Three-finger screenshot (depending on your device model) and make sure that Three-finger screenshot is enabled.
- **2** Swipe down from the middle of the screen with three fingers to take the screenshot.

Take a Partial Screenshot

Use **Partial screenshot** to take a screenshot of a part of the screen. You can choose your preferred screenshot shape (such as a rectangle, oval, or heart).

Take a Partial Screenshot with Knuckle Gestures



- The figures are for reference only.
- **1** Knock on the screen with a single knuckle and hold to draw an enclosed shape around the part of the screen that you wish to capture. Make sure that your knuckle does not leave the screen.
- **2** The screen will display the motion of your knuckle. From there, feel free to:
 - Drag the frame to the desired position, or resize it.
 - Touch any of the shape options at the bottom of the screen to change the shape of the captured area.
- **3** Touch to save the screenshot.


Partial Screenshot Shortcuts

- 1 Swipe down from the upper right edge of the screen to display Control Panel and touch
 - to expand the shortcut switch panel (depending on your device model). Then touch the triangle icon next to **Screenshot**, and select **Partial screenshot**.
- **2** Follow the onscreen instructions to draw an enclosed shape with your finger around the part of the screen that you wish to capture.
- **3** The screen will display the motion of your finger. From there, feel free to:
 - Drag the frame to the desired position, or resize it.
 - Touch any of the shape options at the bottom of the screen to change the shape of the captured area.
- 4 Touch to save the screenshot.

Take a Scrolling Screenshot

Use **Scrollshot** to capture a memorable chat, article, or essential work document that can't display in full on the screen, and share with others.

Use a Knuckle to Take a Scrolling Screenshot

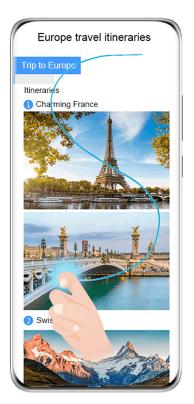

- 1 The figures are for reference only.
- **1** Tap a single knuckle against the screen and hold to draw an "S". Your device will automatically scroll to the bottom of the page to capture all of the content in a single screenshot.
- **2** You can touch the screen at any time to stop the scrolling.

Use a Shortcut to Take a Scrolling Screenshot

- 1 Swipe down from the upper right edge of the screen to display **Control Panel**, touch to expand the shortcut switches panel(depending on your device model), touch the triangle icon next to **Screenshot**, and touch **Scrollshot** in the displayed dialog box.
- **2** You can touch the screen at any time to stop the scrolling.

Swipe down on the Thumbnail to Take a Scrolling Screenshot



1 The figures are for reference only.

After you take a screenshot, a thumbnail will appear in the lower left corner. You can continue to take a scrolling screenshot.

- **1** Swipe down on the thumbnail to take a scrolling screenshot.
- **2** You can touch the screen at any time to stop the scrolling.

Record the Screen

Record your screen activities in sharable videos to compose a tutorial, show off your awesome gaming skills, and a lot more.

Use a Key Combination to Start Screen Recording

Press and hold the Power and Volume up buttons simultaneously to start screen recording. To stop recording, press and hold both buttons again.

Use a Shortcut to Start Screen Recording

- 1 Swipe down from the upper right edge of the screen to display **Control Panel**, touch to expand the shortcut switches panel (depending on your device model), and touch **Screen Recorder** to start screen recording.
- **2** To stop the recording, touch the timer at the top of the screen.
- **3** The recording will be saved in **Gallery**.

Start a Screen Recording with just Two Knuckles

1 Before using knuckle gestures, use either of the following methods to make sure that all necessary features are enabled (depending on your device model):

- Go to Settings > Accessibility features > Shortcuts & gestures > Record screen and enable Record screen.
- Go to Settings > Accessibility features > Motion control > Take screenshot and enable Smart screenshot.
- **2** Knock the screen twice in quick succession with two knuckles to start a screen recording. To stop recording, knock twice as before.

 
Record Your Voice During Screen Recording

You can enable the microphone to record your voice while recording the screen.

After starting a screen recording, touch the microphone icon and ensure that it is displayed as



. You can now record your voice.



Enter Text

Use Celia Keyboard

Celia Keyboard is a secure and intuitive keyboard developed by Huawei. It supports efficient voice inputs, smooth handwriting, an emulated mechanical keyboard, as well as 170+ input languages.

If **Celia Keyboard** is not yet installed on your device, search for and install it in **AppGallery**. Go to Settings > System & updates > Language & input and set Celia Keyboard as the default keyboard.

Text Input

Keyboard input

Celia Keyboard comes with a 26-key layout by default. As you type on the keyboard, a box will be displayed for you to select predicted words.

Press and hold a letter key and then swipe up to enter a number, or swipe left or right to enter the letter.

Voice input

You can have your speech converted into text to improve your input efficiency.

- Touch and hold $\stackrel{\bigcirc}{\underline{}}$ to go to the voice input screen.
- On the voice input screen, touch to select your preferred language.
- This feature is only available in some countries and regions.

Rich	Media	Input
------	-------	-------

- On the keyboard, touch and hold \bigcirc , then touch \bigcirc and select different emojis.
- On the keyboard, touch and hold \bigcirc , then touch $^{(\hat{}_{\bullet}\hat{}_{\bullet})}$ and select different emoticons.

Switch to Another Input Language

Touch and hold in the lower left corner and select **English(United States)** or **More languages...** in the pop-up menu. Alternatively, touch to quickly switch input language.

Celia Keyboard Settings

Set the skin

On the input keyboard, go to $\stackrel{\textcircled{\$}}{=}$ > **Theme** and select a skin.

Set the font

On the input keyboard, go to Settings > Font and select a font.

Set the keyboard sound and vibration effects

On the input keyboard, go to Sound vibration and adjust the Keypress volume and Vibration intensity. You can also touch Sound on keypress and select your desired audio effects.

Set the mechanical keyboard

On the input keyboard, go to Section > Mechanical keyboard and toggle on the Mechanical keyboard switch.

To switch back to the normal keyboard, toggle off the **Mechanical keyboard** switch.

3 Some devices do not support the mechanical keyboard.

Multi-Window

Edit the Multi-Window Dock

Swipe inward from the left or right edge of your phone and hold, to bring up the Multi-Window dock.

- To check whether an app supports Multi-Window: Go to OO on the Multi-Window dock, find the list of apps that support Multi-Window in the More apps section.
- Add apps: Go to $\frac{1}{100}$ on the Multi-Window dock, select your desired apps from the More apps section, and touch $\frac{1}{100}$.

- Move apps: Go to 00 > -, touch and hold an app icon on the Multi-Window dock, drag it up or down to your desired position on the dock, and touch \checkmark .
- **Remove apps**: Go to $\bigcirc\bigcirc\bigcirc$ > \bigcirc , touch \bigcirc in the top right corner of an app icon on the Multi-Window dock, and touch \checkmark .
- The suggested apps shown on the Multi-Window dock cannot be moved around or deleted.

The Multi-Window dock is enabled by default. To disable it, go to **Settings** > **Accessibility features** > **Multi-Window**, and turn off the **Multi-Window dock** switch.

Split the Screen, to Multi-Task Away

Multi-Window allows you to open apps in split screen mode, for seamless multi-tasking at all times.

Split-screen mode is only supported in certain apps.

Splitting the screen:

- **1** After opening an app, swipe inward from the left or right edge of your phone screen and hold, to bring up the Multi-Window dock.
- **2** Hold down on an app in the dock, drag it to the screen, and then release.

Switching split-screen panes:

Touch and hold down on at the top of a split-screen pane until you see the pane shrink, then drag it to the other side of the screen to switch panes.

Exiting split-screen mode:

Touch and hold down on or in the middle of the split screen line, and drag it until you see either pane disappear.

Drag and Drop Between Apps with Multi-Window

Use the Multi-Window feature to easily drag and drop images, text, and documents between apps.

- Drag and drop an image: When taking notes with Notepad, open Files, select the photo
 you want to add, and drag it into the Notepad editor.
- Drag and drop text: When sending an SMS message, open **Notepad**, touch and hold the text you want to send, and drag it into the message text input box.
- Drag and drop a document: When writing an email, open **Files**, select the document you want to attach, and drag it into the email editor.
- Not all apps fully support drag-and-drop with Multi-Window.

Multi-Window View for a Single App

You can create two task windows for the same app (such as Email and Notepad), and drag images, text, or documents between them.

1 This feature is unavailable in some apps.

Enter the split-screen view within an app.

- **1** Open the Email app.
- **2** Swipe inward from the left or right edge of your phone and hold to bring up the Multi-Window dock.
- **3** Touch and hold the Email icon, and drag it to the screen to enter split-screen view.

Drag images, text, or documents between the split-screen windows.

- **Drag an image**: Select an image from one split-screen window and drag it to the other window.
- **Drag text**: Touch and hold the text and select the desired part from one split-screen window, then touch and hold the text again and drag it to the other window.
- **Drag a document**: Select a document from one split-screen window and drag it to the other window.

Use the Floating Window

Open a floating window while gaming, and you can chat with a friend without missing a second of the action.

Display the floating window:

- 1 Swipe inward from the left or right edge and hold to bring up the Multi-Window dock.
- **2** Touch an app icon in the Multi-Window dock to open the app in a floating window.

Relocate the floating window:

Drag the bar at the top of the floating window to move the window to the desired position.

Resize the floating window:

Drag the bottom edge, two sides, or bottom corners of the floating window to resize it.

Display in full screen:

Touch at the top of the floating window to display it in full screen.

Minimize the floating window:

Touch at the top of the floating window to minimize and shrink it into a floating bubble.

Close the floating window:

Touch at the top of the floating window to close it.

Find and Switch Between Floating Windows for Apps

You can quickly find and switch between floating windows for apps using the floating window management function.

- **1** Make sure that you have opened floating windows for multiple apps and minimized them into the floating ball.
- **2** Touch the floating ball to display all floating window previews:
 - **Browse through the floating window previews**: Swipe up or down to find the floating window preview of the app you are looking for.
 - **Display the floating window for an app**: Touch the floating window preview of the app to display it in a floating window.
 - Close the floating window for an app: Touch on the floating window preview to close it.

Open an Attachment in a Floating Window

You can open a link or attachment within specific apps (such as Email and Notepad) in a floating window.

- 1 This feature is unavailable in some apps.
- **1** Open the Email app.
- **2** Touch a link or attachment in the Email app to open it in the floating window.
 - Open a link: Touch a link in the Email app to display it in a floating window.
 - **Open an attachment**: Touch an attachment (such as a document, image, or video) in the Email app to display it in a floating window.

Smart Features

Al Voice

Al Voice

Al Voice allows you to communicate verbally with your phone.

To operate hands-free on your phone, wake up Al Voice and give a voice command.

- This feature is only available in some countries and regions.
 - Please make sure your device has been updated to the latest system version.

Countries and Regions that Support AI Voice

Al Voice is only supported in certain countries and regions. You can set your location to one of these countries and regions on your phone to use **Al Voice**.

- (i) Al Voice can be used in countries/regions such as the UK, France, Spain, Chile, Mexico, Colombia, Italy, Germany, Saudi Arabia, UAE, Kuwait, Jordan, Iraq, Egypt, Turkey, Thailand, the Philippines, Czech Republic, Romania, Serbia, Ukraine, Pakistan, Singapore, Poland, and Malaysia. You need to select a language supported by Al Voice during use.
- 1 Go to Settings > System & updates > Language & input > Language and region and touch Current region to select a country/region from the above list.
- **2** Go to **Settings** > **HUAWEI Assistant** > **AI Voice**, touch **Conversation language**, select a language, and follow the onscreen instructions to set it up.

Wake up Al Voice

You can press and hold the Power button for 1 second to wake up Al Voice:

- 1 Go to Settings > HUAWEI Assistant > AI Voice > Wake with Power button, and enable Wake with Power button.
- **2** Press and hold the Power button for 1 second to wake up **AI Voice**.
- 10 · You cannot wake up Al Voice with the wakeup phrase when your phone is in a call.
 - This feature is only available in some countries and regions.

Communicate with Al Voice

Al Voice can be in one of the following three modes: Idle, Listening, and Thinking. You can talk to **Al Voice** when it is in the Listening mode.

- Idle mode: Al Voice doesn't pick up any sound in this mode.
- Listening mode: You can talk to **Al Voice** as it can listen to you in this mode.
- Thinking mode: **Al Voice** can start to execute your voice commands.
- 1 This feature is only available in some countries and regions.

View AI Voice Skills

You can view the skills incorporated into the **AI Voice** feature in either of the following ways:

- Wake up **AI Voice** and ask: "What can you do?". **AI Voice** will display the Skill center, where its skills are listed.
- This feature is only available in some countries and regions.
 - Please make sure your device has been updated to the latest system version.

Play Music or Videos with Voice Commands

If you want to listen to music or watch videos, wake up **Al Voice** and give the voice commands directly.

Play Music with Voice Commands

You can request your device to play a song for you with Al Voice.

Wake up **Al Voice** and give voice commands such as "Play music", "Play previous song", or "Play next song".

1 This feature is only available in some countries and regions.

Play Videos with Voice Commands

Wake up **Al Voice** and give voice commands such as "Play video", "Play Friends in HUAWEI Video", "Show me a funny video", or "Play a Coldplay video".

7 This feature is only available in some countries and regions.

Speech Translation

Al Voice allows you to translate your voice or text input so you can communicate with foreign friends easily.

- This feature is only available in some countries and regions.
 - Please make sure your device has been updated to the latest system version.

Speech Translation

You can use **Al Voice** to translate your voice or text input into the target language you have set.

- 1 Wake up Al Voice and give the voice command "Translate".
- **2** Say or type in what you want to be translated.
- **3** Al Voice will display the translated result and broadcast it for you.

Communicate Easily with Face-to-Face Translation

Face-to-face translation allows you to overcome language barriers when you are traveling abroad or in an international conference.

- **1** Wake up **AI Voice** and give the voice command "Face-to-face translation" to enter the translation screen.
- 2 Touch or (depending on your device model), so the text on each of the two sections can be read from each side of the device.
- **3** Press the button on your side of the section, say what you want to be translated, and release the button for **AI Voice** to display the translated result in real time and broadcast it.

Enable AI Lens with AI Voice

You can use Al Voice to wake up Al Lens.

Wake up Al Voice and give a voice command such as "Al Lens".

- This feature is only available in some countries and regions.
 - · Please make sure your device has been updated to the latest system version.

Scan and Shop with AI Voice

- **1** Wake up **AI Voice** and give voice commands such as "Look at how much is the refrigerator", or "Help me look at the same style of this juice machine".
- **2** Position the object within the viewfinder and wait for it to be identified.
- **3** You will be provided with purchase links to different shopping platforms once the object has been recognized.

Scan and Translate with AI Voice

- **1** Wake up **AI Voice** and ask questions or give voice commands such as "Please scan this menu and translate it" or "Scan this street sign and translate it".
- **2** Select the source and target languages from the language list.
- **3** Position the text you want to translate within the viewfinder and wait for it to be translated.

Scan to Learn More with Al Voice

- **1** Wake up **AI Voice** and ask questions or give voice commands such as "Help me see what this flower is" or "Please have a look what is this building".
- **2** Position the object within the viewfinder and wait for it to be identified.
- **3** Touch the information card to obtain additional information.

Scan and Count Calories with AI Voice

- **1** Wake up **AI Voice** and ask questions or give voice commands such as "Have a look how much heat this steak has", or "How much heat I can gain by eating this egg tart".
- **2** Position the food within the viewfinder and wait for the calorie and nutrient information to be displayed.

Scan Codes with Al Voice

- **1** Wake up **AI Voice** and give voice commands such as "Scan this QR code" or "Scan the barcode".
- **2** Position the QR code or barcode within the scan frame and wait for it to be recognized.

Al Lens

Scan to Translate

Al Lens allows you to scan and translate text in a foreign language, so you can easily read road signs, menus, or descriptions on cosmetics bottles when you are traveling or shopping abroad.

Scan to Translate Using Camera

- 1 Go to Camera > Photo, touch , and then touch or (depending on your device model).
- **2** Select the source and target languages from the language list.
- **3** Position the text you want to translate within the viewfinder, and wait for it to be translated.

Al Touch

Enable AI Touch

When you see any content that you are interested in on your phone, touch and hold the screen with two fingers to bring up **Al Touch** to learn more.

Go to **Settings** > **HUAWEI Assistant** > **AI Touch** and enable **AI Touch**.

Shop with AI Touch

When you see an item you wish to buy on your phone, you can use **AI Touch** to quickly search for the item and compare prices across multiple shopping platforms before making the purchase.

Touch to Get it Right Away!

- 1 Go to **Settings** > **HUAWEI Assistant** > **AI Touch** and enable **AI Touch**.
- **2** When you see an item that you wish to buy, touch and hold down on the screen with two fingers.
- **3** Adjust the size and position of the identification box so that it covers the item you wish to identify.
- **4** Once the item has been identified, you will see a set of purchase links from different shopping platforms.

Tap to Project to a Smart Screen

Tap to Project Your Phone to a Vision

With just one tap, you can project videos or games from your phone to a HUAWEI/HONOR Vision to enjoy it on a larger display.

- 1 Swipe down from the upper right edge of your phone to display **Control Panel**, touch to expand the shortcut switches panel (depending on your device model), and enable **NFC** and **Wi-Fi**.
- **2** Tap the NFC area of your phone (usually around the rear camera) against the or icon on the remote control of your Vision.
- **3** Follow the instructions in the pop-up dialog to select the Vision on your phone when pairing the two devices for the first time, then click **ACCEPT** on the Vision.

To disconnect the two devices, swipe down from the upper left edge of your phone to display the notification panel and touch **DISCONNECT**.

3 Screen projection won't work if your phone is locked or the screen is off.

Huawei Print

Print Files, with Huawei Print

Your phone makes it easy to print images and documents on it, by detecting nearby printers that support **Huawei Print**. Then just touch to print!

- **1** Power on the target printer and make sure that it is connected to the same Wi-Fi network as your phone, or that Wi-Fi Direct is enabled.
- **2** To print files stored in different locations on your phone:
 - Gallery: Open an image or select multiple images in Gallery, and go to Share > .
 - Notepad: Open a note in Notepad, and go to More > Print.
 - Files: Select one or more files in Files, and go to Share > Print.
- **3** After granting the necessary permissions, touch **Select** to detect nearby printers and select the desired printer. You can then set the number of copies, color, paper size, and other options on the preview screen, and touch **PRINT**. If no printer is detected, download and install the required printer plug-in as prompted on the **Select printer** screen.

Multi-Device Collaboration

Work Seamlessly Across Devices with Device+

Device+ allows for collaboration between different devices, making your phone the hub of your nearby Vision and other supported devices for them to be controlled conveniently. You can also seamlessly transfer ongoing tasks on your phone, from MeeTime calls to audio and video content being streamed, to your Vision with just a tap.

1 Please make sure your device has been updated to the latest system version.

Set Device+

Currently, **Device+** supports linking phones with the following types of devices. To use this feature, make sure that devices to be connected support **Device+**. Before you get started, enable Bluetooth and Wi-Fi and log in to your HUAWEI ID on your phone. For other devices, perform the following settings:

- **Vision**: Ensure that it is connected to the same LAN and logged in to the same HUAWEI ID as your phone.
- **Bluetooth device**: Some Bluetooth devices (such as Bluetooth headsets) can be linked with your phone via **Device+** after establishing a Bluetooth connection.
- Device+ does not support collaboration between phones.
 - If **Device+** is hidden, access **Control Panel** and go to \bigcirc > **Show Device+**.

Transfer MeeTime Calls and Audio or Video Being Streamed to Other Devices

When you are making MeeTime calls on your phone, watching videos (such as in HUAWEI Video, Youku, or other video streaming apps), or listening to music, you can transfer any of these ongoing tasks to another device via **Device+** and pick up from where you left off on the new device. For instance, you can transfer a MeeTime call to your Vision.

10 MeeTime: This feature is only available in some countries and regions.

You can select different devices to transfer the following tasks:

- Videos: Can be transferred to Visions.
- MeeTime calls: Can be transferred to Visions.
- Music: Can be transferred to Bluetooth earphones and Visions (either when the screen is on or off).
- 1 Swipe down from the upper right edge of your phone to display **Control Panel**. Available devices will be displayed in the **Device+** section. You can also touch to search for nearby devices manually.
- **2** Touch a device that you want to transfer the ongoing tasks to.

Audio Control Panel

Audio Control Panel

Manage Audio Playback in Audio Control Panel

When multiple audio apps (such as **Music**) are opened, you can manage music playback and switch between these apps in Audio Control Panel with ease.

- **1** After opening multiple audio apps, swipe down from the upper right edge of the phone to display **Control Panel**, then touch the audio playback card at the top of **Control Panel**.
- **2** The currently and recently used audio apps will be displayed in Audio Control Panel where you can manage playback (such as playing, pausing, and switching to the previous or next song) in the app in use, or touch another audio app to quickly switch playback.
- Some apps need to be updated to the latest version before using this feature.
 - Not all apps support Audio Control Panel.

Quickly Switch Audio Playback Device

When your phone is connected to an audio device (such as a headset, Bluetooth speaker, or Vision product), you can quickly switch the playback device in the audio control section in **Control Panel** (such as for transferring the current music playback from your phone to a Bluetooth speaker).

- 1 Connect your phone to an audio device via Bluetooth or other methods.

 After a Vision product is connected to your phone via Bluetooth, you can also connect it to the same Wi-Fi network and log in to the same **HUAWEI ID** as your phone to perform more operations.
- 2 Swipe down from the upper right edge of your phone to display **Control Panel**, touch or the device icon (such as) in the top right corner of the audio control section at the top, then select the audio device from the connected device list to transfer the current audio playback on your phone to the device.

Camera and Gallery

Take Photos

Take Photos

- 1 Open Camera.
- **2** You can then:
 - Focus: Touch the location you want to focus on.
 To adjust focus and metering separately, touch and hold the viewfinder and drag the respective frame or ring to the desired location.
 - Adjust brightness: Touch the viewfinder. When the focus frame, drag it up or down.
 - · Zoom in or out: On the viewfinder, pinch in or out, or drag the zoom slider.
 - Select a camera mode: Swipe up, down, left, or right across the camera mode options.
 - Turn the flash on or off: Touch \nearrow and select \nearrow (Auto), \nearrow (On), \nearrow (Off), or \bigcirc (Always on).

If you select ^{7A} (Auto) and the camera detects that you are in a dimly lit environment, a flash icon will appear in the viewfinder and the flash will be automatically turned on when you take a photo.

- 1 These features may not be available in some camera modes.
- **3** Touch the shutter button to take a photo.

Front Camera Autofocus

When taking a selfie using the front camera, your phone will automatically recognize the subject's face in the viewfinder and make sure that the eyes are in focus.

- 1 Open Camera.
- 2 Select **Photo**, **Portrait**, or **Video**, and touch to switch to the front camera.
- **3** Align the front camera with the subject's face. When the camera detects a face, the focus frame will be displayed in the viewfinder.
- **4** Touch the shutter button to take a photo or start recording a video.
- Some shooting modes do not support the eye detection feature with the front camera.

Use Gestures to Take Photos

- 1 Open Camera and touch to switch to the front camera.
- 2 Touch and enable Gesture control.
- **3** Return to the viewfinder and hold your palm about 20 cm (8 in.) in front of the screen.
- **4** When the front camera detects your palm, your phone will take a photo after a brief countdown.

Use the Floating Shutter to Take Photos

You can enable the floating shutter to display it in the camera viewfinder, and drag it anywhere you like to take photos quickly.

- 1 Go to Camera > and enable Floating shutter.
- **2** The floating shutter will then be displayed in the viewfinder. You can drag it anywhere you like.
- **3** Touch the floating shutter to take a photo.

Take Burst Photos

Use Burst mode to take a sequence of photos in quick succession so you can choose the best one.

- 1 Open Camera, select Photo mode, and make sure the rear camera is in use.
- **2** Press and hold the shutter button or one of the Volume buttons to take burst photos. When shooting, you'll see a number in the viewfinder, which indicates how many photos you've taken so far.
- **3** Release your finger to stop shooting.

Select the Burst Photos You Want to Keep

- 1 Open Gallery. Touch a burst photo (which is tagged with), then touch .
- 2 Swipe through the burst photos, select the ones you want to keep, then touch follow the onscreen instructions.

To delete the whole burst photo, touch and hold to select the photo, then touch $\overline{\mathbb{U}}$.

Take Timed Photos

The camera timer allows you to set a countdown so you can get into position after you have touched the shutter button.

- 1 Go to Camera > > Timer and select a countdown.
- **2** Return to the viewfinder and touch the shutter button. Your phone will take a photo when the countdown ends.

Use Audio Control to Take Photos

You can use your voice to take photos without having to touch the shutter button.

- 1 Go to Camera > > Audio control, and select an option.
- **2** Go back to the viewfinder, then say your command to take a photo.

Shoot in Portrait, Night, and Wide Aperture Modes

Shoot Dazzling Portraits

Portrait mode comes with custom beauty and lighting effects to choose from, so that a touch of the shutter brings out your subject at their best.

- 1 Open Camera and select Portrait mode.
- **2** Frame your subject within the viewfinder. To take a selfie, touch .
- **3** From there, feel free to:
 - Enable beauty effects: Touch to adjust the beauty effects.

 To disable the beauty effects, drag the setting to its lowest value, or touch.
 - Set lighting effects: Touch , and select your desired effect.
 - Light compensation: When you switch to the front camera in dim lighting conditions, you can touch the flash icon to enable light compensation.

Touch the flash icon and select $\sqrt[5]{A}$ (auto) or \bigcirc (steady on).

- 1) Not all devices support all of these features.
- **4** Touch the shutter button to take a photo.

Take Night Shots

Night mode gives your photos sharper details and brighter colors even when shooting in low light or at night.

- 1 Open Camera or go to Camera > More (depending on your device model), and select Night mode.
- **2** When shooting with the rear camera, some phones allow you to adjust the ISO sensitivity and shutter speed by touching ^{ISO} or ^S in the viewfinder.
- **3** Steady your phone and touch the shutter button.
- **4** Your phone will adjust the exposure time based on the ambient brightness. Keep your phone steady until the countdown finishes. You can also touch the shutter button to take a photo before the countdown finishes.

Some phones do not support ending a countdown before it is due to finish.

Take Photos, with Aperture Mode

Take Wide Aperture Photos

Wide aperture mode allows you to shoot photos and videos with a blurred background while your subject remains in sharp focus.

- 1 Open Camera or go to Camera > More(depending on your device model) and select Aperture mode.
- **2** Touch where you want to focus. For best results, your phone needs to be within 2 m (about 7 ft.) of your subject.
- **3** Touch in the viewfinder and drag the slider to adjust aperture settings. A smaller aperture value will create a more blurred background.
- **4** Touch the shutter button to shoot a photo.

Al Camera

Take Professional-Looking Photos

Master AI is a pre-installed camera feature that helps you take better photos by intelligently identifying objects and scenes (such as food, beaches, blue skies, and greenery, as well as text) and optimizing the color and brightness settings accordingly.

- 1 Master AI is displayed as AI photography or AI camera on some devices.
- **1** Open **Camera** and select **Photo** mode.
- **2** Touch to turn on (A).
- **3** Frame the subject within the viewfinder. Once the camera identifies what you are shooting, it will automatically recommend a mode (such as portrait, greenery, or text).
- **4** To disable the recommended mode, touch \times next to the mode text or turn off $\widehat{\mathbb{A}}$.

High-Res Mode

Take High-Resolution Photos

Take high-resolution photos if you would like to print them or display them on a large screen.


- 1 Go to Camera > More and select High-res mode.
- **2** Frame your subject within the viewfinder, then touch where you want to focus. In **High-res** mode, you won't be able to zoom in or out, or adjust the aspect ratio.
- **3** Touch the shutter button to shoot a photo.

Pro Mode

Use Pro Mode to Shoot Like a Pro

Pro mode lets you fine-tune photos and videos and gives you full control over ISO sensitivity, focus mode, and more when taking photos or recording videos.

Shoot to Stun, with Pro Mode

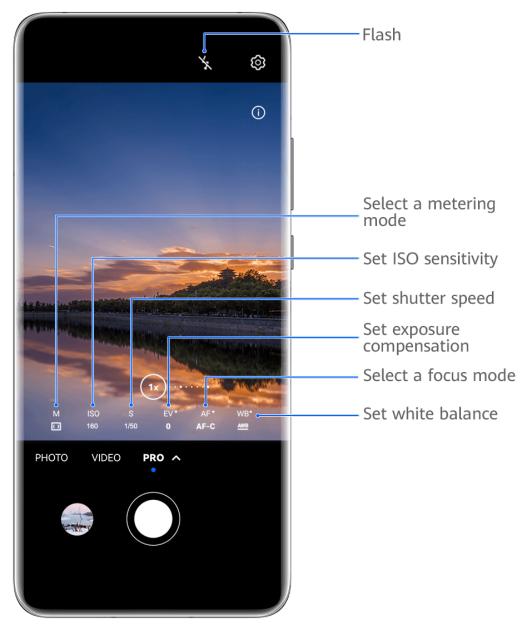

- 1 The figures are for reference only.
- 1 Open Camera or go to Camera > More (depending on your device model), and select Promode.
- **2** From there, you can:

Adjust the metering mode: Touch M and select a metering mode.

Metering mode	Overview
Matrix	Measures light across the entire frame; ideal for shooting natural landscapes.
Center	Focuses on light near the center of the screen; ideal for shooting portraits.
Spot	Focuses on light from a specific region, such as a subject's eyes.

- Adjust the ISO sensitivity: Touch ISO and drag the slider.
 In low-light settings, you'll generally want to increase the ISO sensitivity. In well-lit settings, you'll want to reduce it to avoid image noise.
- Adjust the shutter speed: Touch S and drag the slider.
 The shutter speed determines the amount of light that is able to enter the camera lens. When shooting stationary scenes or portraits, it's recommended that you use a slower shutter speed. Likewise, when shooting fast-moving scenes or objects, you'll want to increase the shutter speed.
- Adjust EV exposure compensation: Touch EV· and drag the slider.
 It's recommended that you increase the EV value in low-light environments, and decrease it in well-lit environments.
- Adjust the focus: Touch **AF** and select a focus mode.

Focus Mode	Usage scenarios
AF-S (single)	Stationary subjects
AF-C (continuous)	Moving subjects
MF (manual)	Touch the subject of interest to focus in on them, such as the subject's face.

• Adjust the color cast: Touch **WB**• and select a mode.

When shooting in bright daylight, select . When shooting in overcast conditions or low-light environments, select

Touch to adjust the color temperature.

- Select the storage format: Pro mode allows you to save the photo in different formats.
 Touch JPG in the viewfinder to select your preferred format.
- **3** Touch the shutter button to take a photo.

- These features are only supported on certain device models.
 - Changing a specific setting will sometimes cause other settings to change as well. Adjust them according to your actual requirements.

Record Videos

Capture Video

- 1 Open Camera and select Video mode.
- **2** Adjust the following settings:
 - · Zoom in or out: Pinch in or out on the viewfinder, or drag the zoom slider.
 - Focus: Touch the location you want to focus on. Touch and hold the viewfinder to lock the exposure and focus.
 - Turn the flash on or off: Touch and select (steady on) or (off).

 When using the front camera to record videos in low-light conditions, you can set the flash to (steady on). The camera will provide light compensation.
 - Adjust beauty effects: Touch and drag to adjust the effects.
 - Adjust the video resolution and frame rate: Go to > Video resolution and select the desired resolution. A higher resolution will result in a higher quality video with a larger file size.

You can touch **Frame rate** to select your desired frame rate.

• Select a space-saving video format: Touch and toggle on the **Efficient video** format switch.

When this feature is enabled, your phone will use a video format that takes up less storage space. However, videos in this format may not play on other devices. Please exercise caution when selecting this option.

- Not all devices support these features.
 - Changing a specific setting will sometimes cause other settings to change as well.

 Adjust them according to your actual requirements.
- **3** Touch to shoot.

When recording videos with the rear camera, you can touch and hold + or - to zoom in or out.

Touch to take a shot of the current frame.

4 Touch to pause and touch to stop shooting.

Time-Lapse Photography

Use Time-Lapse to Create a Short Video

You can use Time-lapse to capture images slowly over several minutes or even hours, then condense them into a short video. This allows you to capture the beauty of change – blooming flowers, drifting clouds, and more.

- **1** Go to Camera > More and select Time-lapse mode.
- **2** Place your phone in position. To reduce camera shake, use a tripod to steady your phone.
- **3** Touch to start recording, then touch to end the recording. The recorded video is automatically saved to Gallery.

Dual-View Mode

Record Dual-View Videos

Dual-view mode allows you to capture a scene in front of you, as well as your reaction to it, with a viewfinder split into two parts. One section shows the scene captured by the front camera, and the other shows the scene captured by the rear camera.

- 1 Please make sure your device has been updated to the latest system version.
- 1 Go to Camera > More, and touch Dual-view.
- **2** Frame your subject within the viewfinder of your phone. The viewfinder is split into two parts, showing the images captured from both the front and rear cameras.
 - You can adjust the zoom level by pinching in or out on the image captured by the rear camera. Touch the screen twice to swap the positions of the images.
 - Touch to enable picture-in-picture mode. Double-tap or touch in the small window to exchange the foreground and background positions. You can also drag the small window to any position. Touch to return to split-screen mode.
- **3** Touch to start recording, and touch to stop recording.

Adjust Camera Settings

Adjust Camera Settings

You can adjust the camera settings to take photos and videos more quickly.

1) The following features may not be available in some camera modes.

Adjust the Aspect Ratio

1 This feature is not available in some modes.

Enable Location Tags

To enable Location tag, enable Location Services for your phone first, then go to Camera >

On Your photos and videos will then be tagged with location information.

You can touch and swipe up on a photo or video in Gallery to view its shooting location.

To enable Location Services on your phone:

- Swipe down from the upper right edge of the phone to display Control Panel, touch
 expand the shortcut switches panel (depending on your device model), and enable
 Location.
- Go to **Settings** > **Location** and enable **Access my location**.

Use the Assistive Grid to Compose Your Photos

Use the assistive grid to help you line up the perfect shot.

- **1** Enable **Assistive grid**. Grid lines will then appear in the viewfinder.
- **2** Place the subject of your photo at one of the intersecting points, then touch the shutter button.

Use Mirror Reflection

When using the front camera, touch , then enable or disable Mirror reflection.

When **Mirror reflection** is enabled, the image will appear as you see yourself in the viewfinder, instead of flipped.

When **Mirror reflection** is disabled, the image will be flipped, so it's the opposite of what you see in the viewfinder.

Mute the Shutter Sound

Enable Mute to mute the camera shutter sound.

1 This feature is only available in some countries and regions.

Capture Smiles

Enable **Capture smiles**. The camera will take a photo automatically when it detects a smile in the viewfinder.

Use the Horizontal Level for Better Compositions

Enable Horizontal level to display a horizontal guiding line on the viewfinder.

When the dotted line overlaps with the solid line, it indicates that the camera is parallel with the horizontal level.

Customize Camera Mode Layout

You can customize the layout of the Camera mode screen based on your preferences by moving the frequently used modes to the camera home screen, or change the order of modes.

- Photo, Portrait, and Video modes cannot be moved to More.
- **1** Go to **Camera** > **More**, and touch to enter the mode editing screen.
- 2 Touch and hold a mode and drag it to the desired position. You can move a mode on the **More** screen to the camera home screen, move the mode on the camera home screen to **More**, or adjust the layout of the mode screen based on how often you use certain modes.

 Modes with a icon can be deleted by simply touching this icon.
- **3** Touch to save the layout.

To restore a deleted mode, go to **Camera** > **More**, touch $\stackrel{\checkmark}{\smile}$, and then touch **ADD**.

Manage Gallery

Make Quick Searches in Gallery

Quickly Search for Images in Gallery

Quickly locate an image by searching with keywords, such as a date, food, or category, in Gallery.

- **1** Go to **Gallery**, touch the search bar at the top of the screen, then type in a keyword (such as "food" or "scenery") or touch a suggested word to start searching.
- **2** Thumbnails of images related to that keyword will be displayed, and more keywords will be suggested. Touch a suggested keyword or enter more keywords for more precise results.

Quickly Search for Videos in Gallery

Your phone automatically analyzes and categorizes videos in Gallery when charging and with the screen off. Suggested keywords will be displayed in the search bar for quick results on related topics.

- **1** Go to **Gallery**, touch the search bar at the top of the screen, then type in a keyword (such as "food" or "scenery") or touch a suggested word to start searching.
- **2** Thumbnails of videos related to that keyword will be displayed, and more keywords will be suggested. Touch a suggested keyword or enter more keywords for more precise results.

Key moments of videos in the search results will automatically be played in sequence for you to see a preview.

(i) Screenshots will not be analyzed.

Edit Images

Gallery offers a wide range of editing features for images.

Basic Editing

- 1 Open Gallery, touch the image you want to edit, and then touch . You can then:
 - Crop and rotate: Touch **Crop**, select a frame, then drag the grid or its corners to select which part you want to keep. You can drag the image in the frame, or use two fingers to zoom in or out to adjust the displayed part of the image.

To rotate the image, touch **Crop** and drag the angle wheel to the desired orientation.

To rotate the image by a certain degree or mirror flip the image, touch \Box or \Box

- Add a filter effect: Touch Filter to select a filter.
- Adjust image effects: Touch Adjust to adjust the brightness, contrast, saturation, and other aspects of the image.
- Other: Touch **More** to edit the image in other ways, such as by adding a color splash, blur, doodle, or text element.

When using the **Adjust** or **Filter** feature, you can touch **Compare** to compare the image before and after editing. Comparison is not supported in some editing modes.

2 Touch or to save the edits.

Add Stickers to Images

- 1 In Gallery, touch an image, then go to > More > Stickers.
- 2 Select a sticker and drag it anywhere you like. Touch and hold the dot on the corner of the sticker and drag it to resize the sticker. Touch to delete the sticker. You can also edit the text in some types of stickers. Touch the editable area which is typically encircled with dash lines to enter the new text.
- **3** Touch \checkmark to save your edits and touch \boxminus to save the image.

Pixelate Images

- 1 In Gallery, touch an image, then go to > More > Mosaic.
- **2** Select a mosaic style and size to cover parts of the image.
- **3** To remove the mosaic, touch **Eraser** and wipe it off the image.
- **4** Touch \checkmark to save your edits and touch \boxminus to save the image.

Rename Images

- 1 In Gallery, touch the image thumbnail you want to rename.
- **2** Go to > **Rename** and enter a new name.
- **3** Touch **OK**.

Collage

You can use the collage feature in Gallery to quickly combine multiple images into one for easier sharing.

- 1 You can access the collage feature in the following ways (depending on your device model):
 - On the **Discover** tab, touch **Create collage**, select some images, then touch **Create**.
 - On the Photos or Albums tab, touch and hold to select some images, then go to > Collage.
- **2** Select a template. You can then:
 - Relocate an image: Touch and hold the image and drag it to a different position.
 - Adjust the displayed portion of an image: Slide on the image, or pinch in or out on it so that only the part you want to see is displayed in the grid.
 - Rotate an image: Touch the image, then touch to rotate it or to flip it.
 - Add or remove borders: By default, borders are displayed between images and along the grid edges. To remove them, touch Frame.
- Touch to save the collage.

 To view the saved collage, go to Albums > Collages.

Share Images and Videos

Open Gallery and share an image or video in the following ways:

- Share a single image or video: Touch the image or video, then touch 2.
- Share multiple images or videos: In an album or on the **Photos** tab, touch and hold to select multiple images and videos, then touch .

Share Your Photos Securely

Before sending a photo, you can choose to delete sensitive information like the location, time, and camera specs.

- 1 Open Gallery.
- **2** Select one or more photos and touch **2**.

- 3 Touch the privacy switch in the upper left corner of the screen. In the displayed **Privacy** options dialog box, turn on the **Remove photo info** and **Remove location info** switches, then touch **OK**.
- *i* If **Location tag** was disabled when a photo was taken, the **Remove location info** switch will not be displayed in the **Privacy options** dialog box when you share the photo.

Organize Albums

Organize images and videos into albums to easily sift through them.

Add Albums

- 1 Go to Gallery > Albums.
- 2 Touch —, name the album, then touch **OK**.
- **3** Select the images or videos you want to add, and then move or copy them to the album.

Sort Albums

- 1 Go to Gallery > Albums > • and touch Sort albums.
- 2 Hold and drag next to the albums to adjust the order.

Touch **Reset** or go to • • > **Reset** to restore the default order.

Adjust the Album Display Style

Go to Gallery > Albums > • •, touch Switch view, and select an album display style.

Change Album Covers

- 1 Go to Gallery > Albums and touch the album you want to set.
- **2** Go to • > **Change album cover** and select the image you want to set as the album cover.

Move Images and Videos

- **1** Open an album, then touch and hold to select the images and videos you want to move.
- 2 Touch • > Move to album to select the desired album.
- **3** Once the items are moved, they will no longer be in their original album.
- The **All photos** and **Videos** albums show all images and videos stored on your device. Moving items across albums will not remove them from these albums.

Delete Images and Videos

Touch and hold to select images, videos, or albums and go to **Delete** > **Delete**.

Some preset albums cannot be deleted, including All photos, My favorites, Videos, and Camera.

Deleted images and videos will be temporarily moved to the **Recently deleted** album for a period of time, after which they will be permanently deleted.

To permanently delete images and videos before the retention period expires, touch and hold to select images or videos in the **Recently deleted** album and go to **Delete** > **Delete**.

Recover Deleted Images and Videos

In the **Recently deleted** album, touch and hold to select the items you want to recover, then touch to restore them to their original albums.

If the original album has been deleted, a new one will be created.

Add Images and Videos to Favorites

Open an image or video, then touch .

The item will appear in both its original album and the My favorites album.

Hide Images and Videos

Keep images and videos in Gallery under wraps and out of view.

Go to **Gallery** > **Albums**. From there, you can:

- Hide images and videos: Tap to open an album, touch and hold down to select the images
 and videos you wish to hide, and then go to
 > Hide > OK.
- View hidden images and videos: In the Albums tab, go to • > Hidden items.

You can touch • • in the **Hidden items** screen to switch to album view, to quickly locate the desired items.

• Unhide items: In Hidden items, touch and hold down to select the images or videos you wish to unhide, then touch Unhide.

These images and videos will then be restored to their original albums.

Highlights

Introduction to Highlights

Gallery automatically creates **Highlights** albums from your best photos and videos based on time, location, and theme information, and even generates a short video clip so you can walk down memory lane and instantly relive the good times.

• To start using **Highlights**, go to **Camera** > and enable **Location tag**.

• **Highlights** albums are created automatically when your phone is charging and connected to a Wi-Fi network, the screen is turned off, and the battery has sufficient power. It may take a while for the albums to be created.

Highlights albums will not be automatically generated if there are not enough relevant photos.

View Highlights Videos

- 1 Go to Gallery > Highlights and touch an album.
- 2 Touch to play the video.

Change the Highlights Album Cover

- 1 On the **Highlights** tab, touch an album.
- **2** Go to • > Change cover, select a photo, then touch \checkmark .

Share Highlights

You can share Highlights as videos or images with friends.

Share Highlights videos as videos

- 1 If you have edited and exported a **Highlights** video, the exported video can be found in **Gallery** > **Albums** > **Video Editor**.
- 2 You can touch and hold to select the video in **Video Editor** and touch to share it.

Share Highlights videos as images

Touch the **Highlights** video you want to share, then go to • > **Share**. Your phone will automatically generate an image for the video and you can follow the onscreen instructions to share it with others.

You can also share the photo under **Gallery** > **Albums** > **Collages**, where the images created for **Highlights** videos are saved by default.

Add or Remove Images or Videos from a Highlights Album

- 1 In the Highlights tab, select a Highlights album.
- **2** You can then:
 - Add images or videos: Touch and follow the onscreen instructions to select images or videos to be added to the album.
 - Remove images or videos: Touch and hold to select the images or videos you want to remove from the album, touch , then touch **Remove**.

Rename Highlights Albums

- 1 On the **Highlights** tab, touch an album.
- **2** Go to • > **Rename** and enter a new name.

Delete Highlights Albums

- 1 On the **Highlights** tab, select a **Highlights** album.
- **2** Go to • > **Delete** and then touch **Delete**.
- (i) After you delete a **Highlights** album, it cannot be restored, and the photos and videos in the **Highlights** album will remain in Gallery.

Apps

MeeTime

Use MeeTime to Make Calls

Use MeeTime to make high-quality video or voice calls with contacts who have Huawei devices (such as phones and tablets), and share your screen during calls.

Thanks to the GPU Turbo technology, the video call resolution will be optimized automatically when the network signal is weak. With intelligent algorithms, the other party can see your face clearly even when making a video call at night or in dark environments.

- 1. Please make sure your device has been updated to the latest system version.
 - This feature is only available in some countries and regions.
 - If your phone is not pre-installed with the MeeTime app, download it from AppGallery.

Using the Free MeeTime Service

- MeeTime only uses Wi-Fi or mobile data and will not be charged as calls by your carrier. It is recommended that you use this feature over a Wi-Fi network.
- If you need to make a video call using mobile data, you can perform the following to save on the amount of mobile data you use: On the **MeeTime** screen, touch your profile picture in the upper right corner to access the **Settings** screen, then turn on the **Data saver** switch.

Make a High-quality Video or Voice Call


Use MeeTime to make smooth and high-quality calls between Huawei devices such as phones and tablets. You can enjoy clear video calls even in dark environments and adjust the beauty level during video calls.

- 1 Open MeeTime and follow the onscreen instructions to activate and enable it.
- 2 In the **MeeTime** app, go to **Contacts** > **MeeTime**, and touch or next to a contact who has enabled **MeeTime** on their devices to make a high-quality video or voice call.
- 3 During a video call, touch the screen and then touch > * to access the **Soften** function. Drag the slider left or right to adjust the beauty level.
 - For better video calls, keep your phone within 1 meter (3.3 feet) of you and ensure that you are in a bright environment.
 - The beauty level adjustment feature is only supported by some products.
- **4** You can touch and then perform the following:

- Touch to mute MeeTime.
- Touch to use the speaker.
- Touch to switch to a voice call.
- Touch to share the screen.
- 1 To view or manage your call logs, touch Calls.

Share Your Phone Screen During a MeeTime Call

During a MeeTime video call, you can share your screen with the other party and doodle on the screen. The other party will then be able to view your screen and your doodles on it.

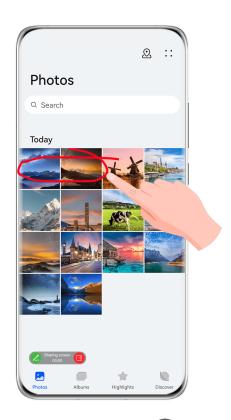

- **1** During a video call, touch the screen, go to > , and follow the onscreen instructions to share your screen.
 - While sharing your screen, touch L to start doodling on your screen.
- 2 Touch to exit screen sharing.

Set MeeTime Phone Numbers

You can use MeeTime with more than one of your phone numbers.

- 1 On the **MeeTime** screen, touch your profile picture icon in the upper right corner to access the **Settings** screen.
- **2** Touch **Number settings**. You can then:

- Touch to add another phone number if only one phone number has been linked.
- Touch to delete any numbers or add new ones if multiple phone numbers have been linked.
- In the list of **Outgoing number (this device)**, select one of the added phone numbers to set it as the default number.

Notepad

Create a Note

To help you quickly keep a track of your thoughts and inspirations, you can create notes using the Handwrite (to write or draw the content) and Scan document modes, or in conjunction with Multi-Screen Collaboration.

Add Content to a Note

- 1 Go to **Notepad** > **Notes** and touch .
- **2** Enter the title and content of the note. You can then perform the following:
 - Touch to add a checklist.
 - Touch $\stackrel{\triangle}{=}$ to change the text style, paragraph alignment, and background.
 - Touch to insert a picture. Touch and hold the picture, then drag it to the desired position in the note.
 - To organize your notes for easier access and viewing, categorize a note after finishing it.
- **3** Touch to save the note.

Add a Note by Scanning Documents

- 1 Open Notepad and go to Notes > > Scan document.
- **2** Align your device camera with the picture or file you want to scan and touch to start scanning. The scanned pages are saved in Notepad.
- **3** Go to Extract text > Save > Save images and text > \times to save the note.
- 1 If your phone does not have this option, it indicates that this feature is not supported.

Create Notes by Scanning Certificates or Cards

You can scan certificates or bank cards for future use and add watermarks to prevent theft.



- **2** Point the camera to the certificate or bank card you want to scan, and touch to scan it one by one or consecutively. Touch to preview the scanned copies.
- **3** (Optional) If you manually unskew the scanned copies, touch \(\sqrt{} \) to preview them again.
- **4** To add a watermark to the scanned copies, touch **Full-screen watermark** or **Single watermark**.
- **5** Touch to insert the modified scanned copy into the note.
- **6** Touch to save the note.

Add a Handwritten Note

You can add a handwritten note to write down thoughts and inspirations that would be difficult to convey through text.

- 1 Go to Notepad > Notes and touch .
- 2 Touch L to write or draw the content you want to note down in the selected color.
- **3** Touch to save the note.

Create Notes by Sharing

You can share web pages, images, text, and other content from other apps to Notepad.

- Not all apps support this feature.
- **1** Open the content you want to share (such as a web page, image, or text) in an app that supports the sharing feature.
- **2** Touch the Share button and select **Notepad**.
- **3** Follow the onscreen instructions to save the shared content to an existing note or create a new note.

Create To-dos

You can create to-dos to keep a track of day-to-day essentials, such as daily shopping lists, tasks at work, and household chores.

Add a To-do Item and Set a Reminder

You can add a to-do item and set a time reminder for it.

If you have marked the to-do item as important, you will be prompted with a full-screen reminder when the screen is locked.

1 Go to **Notepad** > **To-dos** and touch



- **2** Enter your to-do item.
- **3** Touch , set a reminder time, then touch **OK**.
- **4** Touch to mark the to-do item as important.
- **5** Then touch **Save**.

Set Repeated Reminders for a To-do Item

If you specify a time for a to-do item, you can select a repeat mode for it (for example, **Never**, **Every day**, **Every week**, **Every month**, or **Every year**), and your phone will repeatedly prompt you to complete the to-do item at the specified time.

Manage Your Notepad

You can sort your Notepad items by category and put them into different folders, delete unwanted items, and share items with other people.

When viewing a list of items or an individual item in Notepad, touch the status bar at the top of the screen to quickly return to the first item or the beginning of the item you are viewing.

Use App Lock for Notepad or Lock a Note

You can apply App Lock to Notepad or set a password for a note to protect your privacy. **Enable the app lock for Notepad**: Go to **Settings** > **Security** > **App Lock**, enter the lock screen password or customize the app lock password as prompted, and then turn on the

Lock a note: Open the note you need to lock in Notepad, go to • > **Add lock**, and follow the onscreen instructions. To unlock your note, go to • > **Remove lock**.

If your device supports fingerprint or face unlock, you can use fast authentication by performing the following: Go to Notepad > • • > Settings > Note lock, then enable Unlock with Fingerprint ID and Unlock with Face Recognition.

Sort Notepad Items

switch next to Notepad.

Add notes and folders in Notepad, sort the notes or to-dos into categorized folders, and even add color-coded labels.

Add folders or notes:

- Add folders: Touch All notes or All to-dos, and go to Manage > New folder. Rename it and touch Save.
- Add notes: Touch All notes or All to-dos, open a folder, and touch New. Select a color label, rename it and touch Save.

To rename or delete a folder or note, touch **All notes** or **All to-dos**, and go to **Manage** > **Edit**. Then touch the folder or note name to rename or delete it.

Sort notes or to-dos:

• On the **All notes** screen, swipe left on an item, and touch or or to pin it to the top or add it to favorites.

To view favorited items, touch All notes and go to My favorites.

- On the **All notes** or **All to-dos** screen, swipe left on an item, and touch to sort it to your desired notebook.
- Touch and hold down on a note or to-do item, select the items you wish to classify under the same category, and touch to move them to the target category.
- folders and Items in Exchange accounts cannot be edited.

Share and Export Notepad Items

Share notes or to-dos in Notepad with colleagues or loved ones, and even export notes in image, TXT, and other formats.

You can share notes or to-dos in the following ways:

- To share a single note or to-do item: Open the item you wish to share from the All notes
 or All to-dos screen, and then touch and share it as prompted.
 Notes can be shared by touching As image, As text, or To another device.
- To share multiple notes: Access the All notes screen, touch and hold down on a note, select the items you wish to share, and then touch and share them as prompted. You can export notes in any of the following ways:
- Export as an image: Open the note you wish to export, and go to > As image > Save image. You'll find the exported file in Gallery.
- Export as a document: Open the note you wish to export, go to > Export as document, and follow the instructions to select the document format you need.
 To view notes that you have saved, open Files, search for and access Documents, then touch NotePad.
 - The **Export as document** feature is not applicable to handwritten-only notes. Other types of notes can be exported into TXT or HTML files.

Print Notepad Items

- 1 On the All notes screen, open the item you want to print.
- **2** Go to • > **Print**, then select a printer and configure printing settings as prompted.

Delete Notepad Items

You can delete Notepad items in either of the following ways:

- On the All notes or All to-dos screen, swipe left on an item, and touch to delete it
- Touch and hold down on the note or to-do item you wish to delete, select or drag over the check boxes of any other notes or to-do items that you wish to delete as well, then touch

After deleting an item, you can touch **All notes** or **All to-dos** and go to **Recently deleted** to find the deleted item. To restore a deleted item, touch and hold down on it, or go to its details screen and touch .

Compass

Compass

View Directions and Coordinates, with Compass

Compass shows you the direction your phone is pointing towards, as well as your current longitude and latitude.

- **1** You can open Compass in either of the following ways:
 - Swipe down from the middle of the home screen to display the search box, and search for **Compass**. The first result will be the pre-installed **Compass** app.
 - Find Compass in the Tools folder.
- **2** You can view directions and coordinates in either of the following ways:
 - When you hold your phone flat, the Compass screen will display the direction your phone is pointing towards, along with the current coordinates.
 - When you hold your phone upright, the Compass screen will display the viewfinder of the rear camera on your phone, as well as the direction your phone is pointing towards, and the current coordinates.

To lock the current direction, touch the compass dial. The dial marks will turn blue if you stray off course.

For optimal accuracy, remember to hold your phone flat or upright when using Compass.

Settings

Display & Brightness

Use Eye Comfort Mode

Eye comfort mode can effectively reduce harmful blue light and adjust the screen to display warmer colors, relieving eye fatigue and protecting your eyesight.

Enable or Disable Eye Comfort Mode

- Swipe down from the upper right edge of the screen to display **Control Panel** and touch
 - to expand the shortcut switches panel (depending on your device model). Enable or disable **Eye Comfort**. Touch and hold **Eye Comfort** to access the settings screen.
- Go to Settings > Display & brightness > Eye Comfort and enable or disable Enable all day.

Once Eye Comfort mode is enabled, will be displayed in the status bar, and the screen will take on a yellow tint since less blue light is being emitted.

Set a Schedule for Eye Comfort Mode

Go to **Settings** > **Display & brightness** > **Eye Comfort**, enable **Scheduled**, then set **Start** and **End** according to your preferences.

Adjust the Blue Light Filter in Eye Comfort Mode

Go to **Settings** > **Display & brightness** > **Eye Comfort**, enable **Enable all day** or set up **Scheduled**, and adjust the slider under **Filter level** to customize how much blue light you would like to be filtered.

Biometrics & Password

Set Fingerprints

You can enroll a fingerprint and then use it to unlock the screen and access your Safe, App Lock, and more.

Add Fingerprints

- 1 Go to Settings > Biometrics & password > Fingerprint ID or Settings > Biometrics & password > Fingerprint ID > Fingerprint management (depending on your device model), and follow the onscreen instructions to set or enter the lock screen password.
- **2** Touch **New fingerprint** or **New rear fingerprint** (depending on your device model) to begin enrolling your fingerprint.

- **3** Place your fingertip on the fingerprint sensor. When you feel a vibration, lift your finger and then press down again. Move your finger around until the entire fingerprint is captured.
- **4** Once enrollment is complete, touch **OK**.

You can now place your finger on the fingerprint sensor to unlock the screen.

Rename or Delete a Fingerprint

- 1 Go to Settings > Biometrics & password > Fingerprint ID or Settings > Biometrics & password > Fingerprint ID > Fingerprint management(depending on your device model) and enter your lock screen password.
- 2 In the Fingerprint list section, touch an enrolled fingerprint to rename or delete it.

Fingerprint Identification

Fingerprint identification allows you to match your fingers with the enrolled fingerprints.

- 1 Go to Settings > Biometrics & password > Fingerprint ID or Settings > Biometrics & password > Fingerprint ID > Fingerprint management(depending on your device model) and enter the lock screen password.
- 2 In the Fingerprint list section, touch Identify fingerprint.
- **3** Touch the fingerprint sensor with your finger. The recognized fingerprint will be highlighted.

Use Your Fingerprint to Access Your Safe

- 1 Go to Settings > Biometrics & password > Fingerprint ID or Settings > Biometrics & password > Fingerprint ID > Fingerprint management (depending on your device model) and enter your lock screen password.
- **2** Turn on the switch for **Access Safe** and follow the onscreen instructions to link your fingerprint with the Safe.

Now you can go to **Files** > **Me**, touch **Safe**, then use your fingerprint to access it.

Please make sure your device has been updated to the latest system version.

Use Your Fingerprint to Access a Locked App

- 1 Go to Settings > Biometrics & password > Fingerprint ID or Settings > Biometrics & password > Fingerprint ID > Fingerprint management(depending on your device model) and enter the lock screen password.
- **2** Turn on the **Access App Lock** switch and follow the onscreen instructions to link your fingerprint with App Lock.

You can then touch a locked app on your home screen and use your fingerprint to access it.

Enable and Use Fingerprint Payment

You can use your fingerprint to verify your payments in a payment app.

Go to the payment app and follow the onscreen instructions to enable this feature.

Face Recognition

Face Recognition allows you to unlock your phone or access locked apps with your facial data.

Set up Face Recognition

- 1 Go to Settings > Biometrics & password > Face Recognition, and enter your lock screen password.
 - If you haven't set the lock screen password, follow the onscreen instructions to do so.
- 2 Some phones support screen wakeup when you raise the device. If you can find the **Enable raise to wake** setting option on your device, you can enable it as needed.
 - *i* The settings items vary by device. If your phone does not provide a specific item, it indicates that the corresponding feature is not supported.
- **3** Touch **Get started**, position your face in front of your phone, and follow the onscreen instructions to enroll your facial data.

Set Face Unlock

On the Face Recognition screen, touch Unlock device and select an unlock method.

Some phones support **Require eye contact**. When this is enabled, you will need to keep your eyes open while unlocking the device with your face. If you can't find this switch on your device, it means that this feature is not supported.

if you have enabled PrivateSpace, you'll only be able to use Face unlock in MainSpace. If you have added multiple users, you'll only be able to use Face unlock with the Owner account.

Access App Lock with Face Recognition

On the **Face Recognition** screen, enable **Access App Lock**, and follow the onscreen instructions to add your facial data to App Lock.

You can then touch a locked app on your home screen and use face recognition to access the app.

Link Your Face with Password Vault

Access the Face Recognition screen and enable Autofill usernames and passwords.

When logging in to an app, you can use Face Recognition to automatically fill in the account name and password saved in Password Vault.

Bolster Your Device Security, with Face Recognition

Enable **Require trusted device** when using Face unlock to ensure that your phone will only unlock when it detects your face and is connected to a trusted device.

This feature is disabled by default. To enable it, go to the **Face Recognition** settings screen, touch **Require trusted device**, turn on the **Require trusted device** switch, and follow the onscreen instructions to complete the settings.

(i) A trusted device can be any Bluetooth device that can be used for unlocking purposes, such as earphones, a watch, or a band.

Disable or Delete Facial Data

Go to the Face Recognition screen to:

- Prevent certain features from accessing your facial data: Disable Unlock device, Access
 App Lock, or other features, to prevent them from using your facial data. Doing so won't delete your facial data.
- Delete facial data: Touch **Delete facial data** to delete your facial data. You'll have to enroll your face once again if you want to use the facial recognition feature later on.

Security

Set a SIM PIN Lock

A PIN is the identity code of a SIM card, and can be set as the SIM card lock. After you set it up, you will be required to enter the correct PIN to unlock the SIM card every time you power on your phone or switch to a new phone to prevent unauthorized access.

If you have entered a wrong PIN and exceeded the maximum number of attempts allowed to unlock the PIN, you will need to enter the PIN Unlocking Key (PUK) then reset the PIN. If you exceed the maximum number of attempts allowed to unlock the PUK, your SIM card will be permanently blocked.

The PIN and PUK of your SIM card are provided by your carrier. The number of digits and maximum number of attempts allowed to unlock your PIN and PUK are subject to your carrier.

- **1** Go to **Settings** > **Security** > **SIM PIN** to enter the SIM PIN screen.
- 2 Enable SIM PIN, enter the PIN, then touch OK.
 To change the PIN, touch Change SIM PIN, and follow the onscreen instructions.

About Phone

Legal Notice

Copyright © Huawei 2022. All rights reserved.

This guide is for reference only. The actual product, including but not limited to the color, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.
Please visit https://consumer.huawei.com/en/support/hotline for recently updated hotline and email address in your country or region.
Model: CTR-LX1 CTR-LX2 CTR-LX3
EMUI12.0_01